

DigiTrak Quick Reference

GPS MODE

When AP is ...	Display Shows...	To ...	... Perform the action
Initially Powered-On	Flashing — — — —	Allow Gyro to Center	IMPORTANT! Hold Aircraft Still for approximately 10 seconds as long as display is flashing
Disengaged	OFF	Engage Autopilot	Click  to capture and hold present heading — OR — Press and Hold Control Stick Button. After 1 second, the Control-Stick Mode goes into effect (see ← below).
		Manually Center Gyro	With aircraft heading held completely still , press and hold both  and  simultaneously. (Display will show — — — while centering.) Hold for about ten seconds, and then release both buttons.
		Disengage Autopilot	Click  — OR — Click Control Stick Button
Engaged, holding a selected Ground Track	Selected Ground Track	Modify selected Ground Track in 1 degree increments	Click  or  once per degree
		Hand-fly aircraft to a different direction	Press and Hold Control Stick Button. After 1 second, the Control-Stick Mode is in effect (see ← below).
		Enter a constant-rate turn	Hold  or  for at least 1 sec, then release. Constant-turn mode is in effect (see ↑ below).
Engaged, in NAV mode	Alternating ground track and — F —	Enter NAV mode	Press  and  at the same time , then release (Note: do not hold buttons down more than one sec). Depending on position relative to course line, autopilot will steer for an intercept of up to 45 degrees.
	— 0 —	Leave NAV mode	Click  or  to leave NAV mode, OR Click Control Stick button to disengage, OR Press and Hold Control Stick Button. After 1 second, the Control-Stick Mode is in effect (see ← below).
	Electronic DG	Capture a new selected Ground Track	While holding Control Stick Button, hand-fly to desired Ground Track. Level the wings, then release Control Stick Button
↑ Engaged, in Constant-turn Mode	Electronic DG	Stop the turn and capture a new Ground Track to be held	Click  or 

DigiTrak Quick Reference

MAGNETIC BACKUP MODE

When AP is ...	Display Shows...	To ...	... Perform the action
Initially Powered-On	Flashing — — —	Allow Gyro to Center	IMPORTANT! Hold Aircraft Still for approximately 10 seconds as long as display is flashing Click [ON/OFF] to capture and hold present heading — OR — Press and Hold Control Stick Button. After 1 second, the Control-Stick Mode goes into effect (see ← below).
Disengaged	— — —	Engage Autopilot	With aircraft heading held completely still, press and hold both  and  simultaneously. (Display will show — — — while centering.) Hold for about ten seconds, and then release both buttons.
		Manually Center Gyro	Click [ON/OFF] - OR - Click Control Stick Button
Engaged, holding a Magnetic Heading	— — —	Disengage Autopilot	Click  or  once per degree
		Modify magnetic heading in 1-degree (approx.) increments	Press and Hold Control Stick Button. After 1 second, the Control-Stick Mode is in effect (see ← below).
		Hand-fly aircraft to a different direction	Hold  or  for at least 1 sec, then release. Constant-turn mode is in effect (see ↑ below).
← Disengaged, in Control Stick Mode	— — —	Enter a constant-rate turn	While holding Control Stick Button, hand-fly to desired heading. Level the wings, then release Control Stick Button
↑ Engaged, in Constant-turn Mode	Moving — — — to left or right	Capture a new selected Heading	Click  or 